


## PRODUCT DATASHEET

### TeleCare PULL

Pullcord

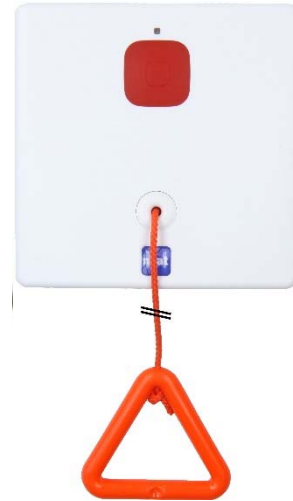

---

#### **Explanation:**

The pullcord PULL is one of the accessories that are intended to be used together with care phone NOVO. When someone pulls the pullcord, the unit will immediately transmit a radio signal to NOVO. The care phone will then call the alarm central.

PULL communicates by radio and can be used with batteries. As a result of this PULL can be installed everywhere without any need of cables. However, PULL may also be powered from 12-24 Volts of central power. To allow installations inside a bathroom PULL and its mounting frame are IP44 classified. The pullcord PULL uses the EU recommended frequency dedicated for social alarms. This means that there is a very small chance for interfering sources. This is not the case for transmitters using 433 and 868 MHz frequencies.

PULL complies with all the European requirements for LVD, EMC and R&TTE directives.

---

#### **Vantages:**

- IP44-Classification
- Battery status supervision
- Reliable radio communication with acknowledgement
- Transmits a radio signal when pullcord is activated
- Powered by battery or central power 12-24V
- Visual indication
- Integrated radio transmitter
- 869.200-869.250 MHz frequency dedicated for social alarms